

QUICK, SIMPLE INSTALLATION

The flexibles, as part of a fully engineered system, are installed in one continuous length, without ballasting or other compensation devices. Unlike other systems, there are no intermediate couplings or swivel connections to assemble or maintain.

CUSTOM ENGINEERED REPEATABLE LAY PATTERNS

The COFLEXIP flexible pipe will never interfere with equipment inside the tank even with the roof in its lowest position. Even though it flexes freely, the flexible pipe will lay on the tank floor in the same position and pattern. This lay pattern is custom engineered for each tank and verified with the customer's tank specifications in scale model or computer tests.

Rule of thumb for length determination		
	English (ft)	Metric (m)
3 in	H + 6 ft	H + 1.83 m
4 in	H + 8 ft	H + 2.44 m
6 in	H + 12 ft	H + 3.66 m
8 in	H + 15 ft	H + 4.57 m

H = Floating roof tank shell height